



# Quick Guide

- LK Tryckgivare med T-rör G20 WSS (RSK 188 22 20)
- LK Trykksensor med T-rør 3/4" WSS (NRF 505 18 51)
- LK Paineanturi T-kappaleella 3/4" WSS (LVI 457 97 07)
- LK Pressure sensor with T-piece 3/4" WSS (Art. No. 188 22 20)

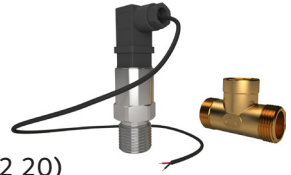

1. Montera T-rör och tryckgivare | Monter T-rør og trykksensor  
Asenna T-kappale ja paineanturi | Mount the T-piece and Pressure sensor

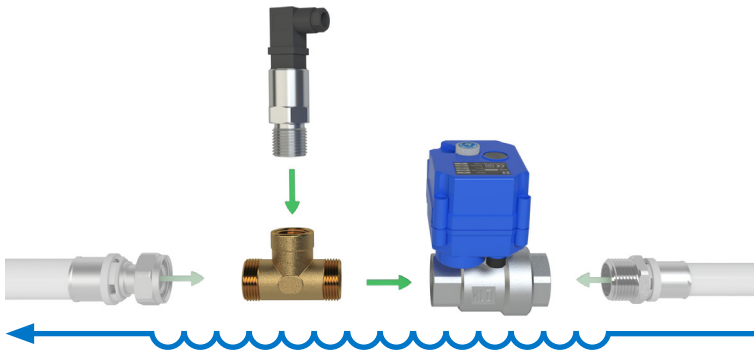

2. Anslut kabel | Koble kabelen | Liitä kaapeli | Connect the wire

